

FACT SHEET

HEADLAMP ADJUSTMENT

HL-ADJ Manually adjustable headlamp beam



Easily accessible control.

Manually adjustable headlamp beam

The headlamp adjustment is used to change the height of the light beam. When there is a difference between the chassis inclination angle loaded and unloaded this option can be useful to avoid dazzling other road users.

The function is not needed when the chassis height is adjusted by the air suspension system's height control.

The adjustment is manoeuvred via a control easily accessible on the left-hand side of the steering wheel.



SAFETY

- Prevents dazzling which contributes to increased safety.